
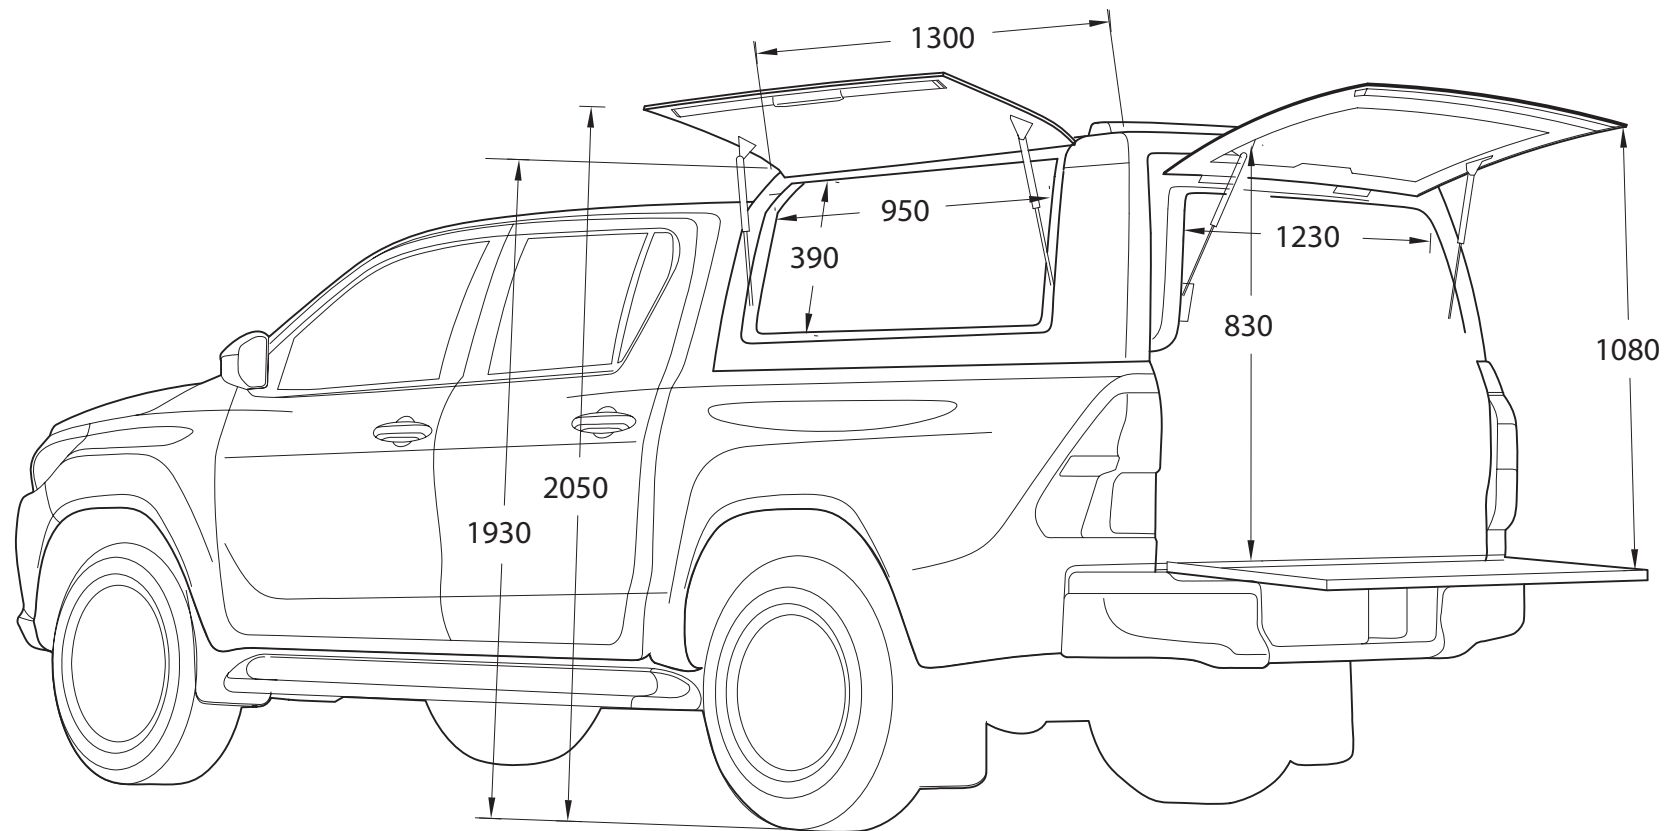
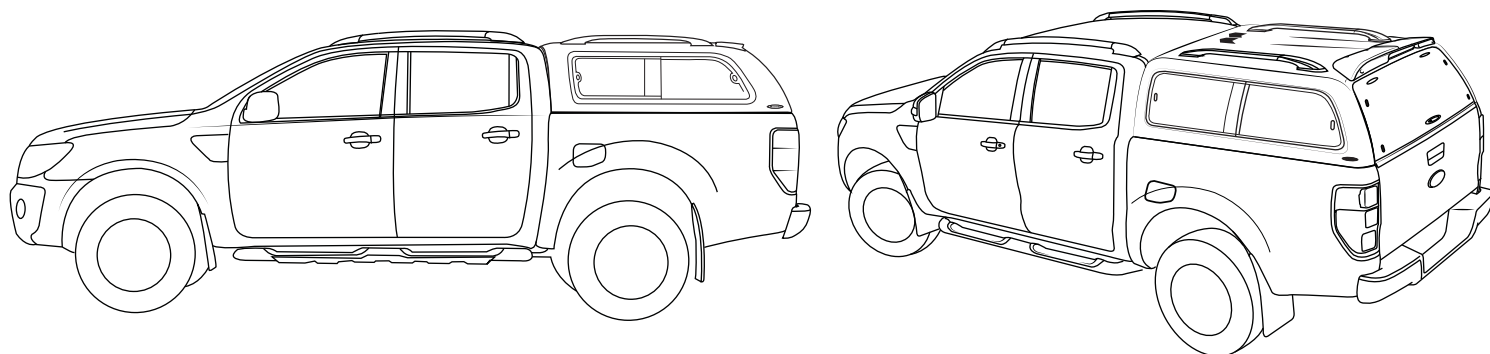






TOYOTA HILUX 2016+ DOUBLE CAB PROTOP GULLWING









INSTALLATION PARTS

 Hardtop 1 set. C-130043	1  Spare parts carton box 1 pc. C-130043	2  Weather strip 1 roll. C-020132	3  Rubber truck edge 1 roll. C-020145	4  ALNew S4 Kwick Klamp 6 sets. C-120080
5  Kwick Klamp Cover 6 pcs. C-100214	6  Latch stl S-5 R/L 1 pair. C-110060	7  Screw JP 8-1/2 EDP 2 pcs. C-030059	8  Double bolt washer 2 pcs. C-120108	9  PVC double bolt washer 2 pcs. C-020221
10  Shock absorber 2 pcs. C-160204	11  Lock nut M8 12UM 4 pcs. C-030645	12  Al. adjustable shim for latch 2 pcs. C-110160	13  Light logo 602 1 set. C-050056	14  CARRYBOY Logo 2 pcs. C-110085
15  Check list 1 pc. CL-280034-53	16  Installation manual 1 set. C-132572-49			


INSTALLATION PARTS (WIRING HARNESS)

Remote (Front)	1  Electric Connecting kit 1 set. C-090440-03	2  Cable tie 5.5 15 pcs. C-130046	3  Electric klamp lock 4 pcs. C-160259	
Remote + Defogger (Front)	1  Electric Connecting kit 1 set. C-090437-02	2  Cable tie 5.5 15 pcs. C-130046	3  Electric klamp lock 5 pcs. C-160259	4  Adaptor switch 1 pc. C-100530
Remote + Defogger (Rear)	1  Electric Connecting kit 1 set. C-090437-06	2  Cable tie 5.5 15 pcs. C-130046	3  Electric klamp lock 5 pcs. C-160259	4  Adaptor switch 1 pc. C-100530


INSTALLATION TOOLS

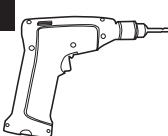1  Screw Driver	2  Hole saw Ø 20 mm.	3  Wrench No.13 Torque Wrench No.10	4  Drill Ø 3.5 mm.	5  Cutter	6  Measuring tape	7  Screw driver
--	--	--	--	--	---	---


- 1** Clean the edge of truck bed.
Install rubber truck edge on the truck bed.

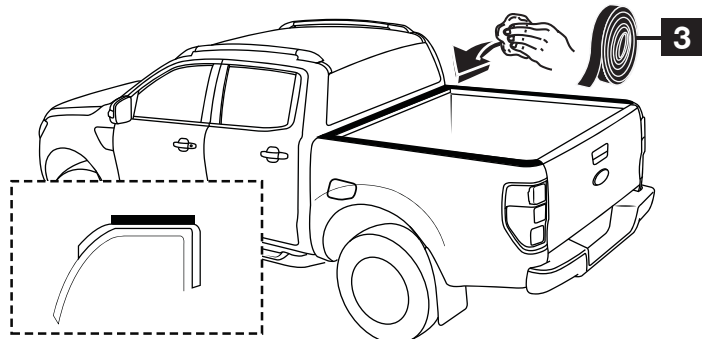


- 2** Stick light logo hardtop.

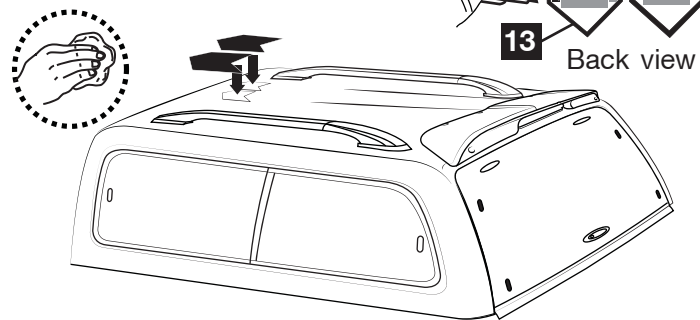





- 3** Place hardtop on the truck bed and adjust alignment between left and right.

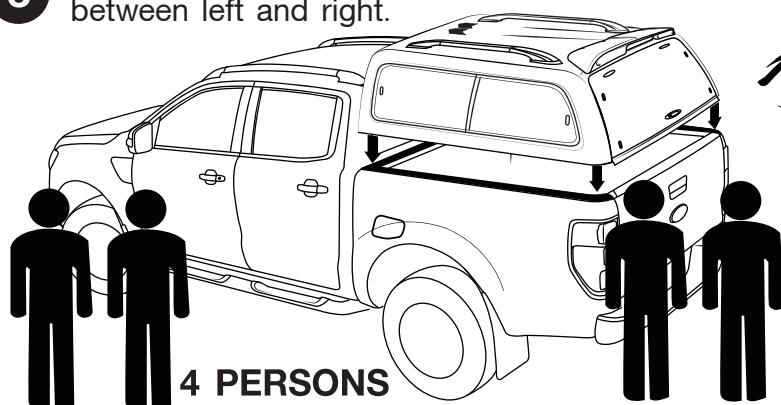


4 PERSONS

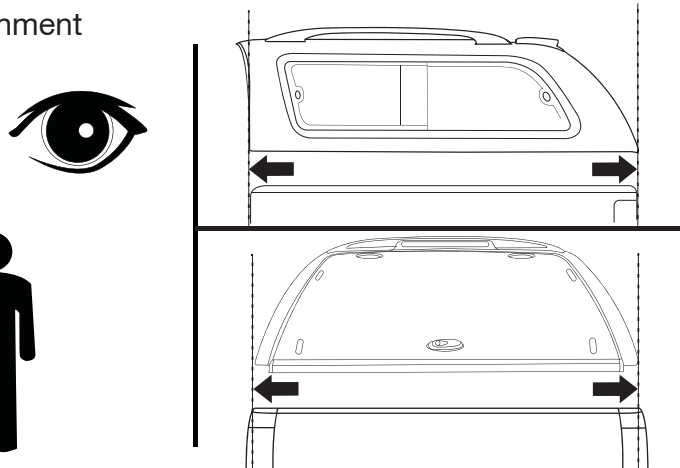


- 4** Install kwick klamp for 6 positions.

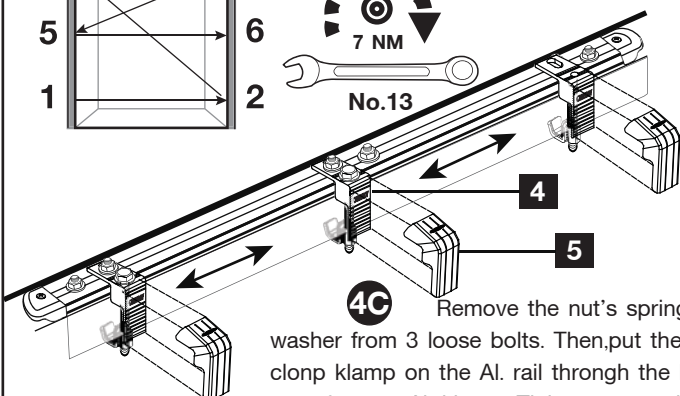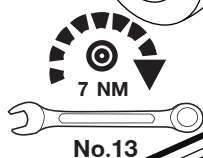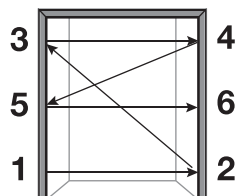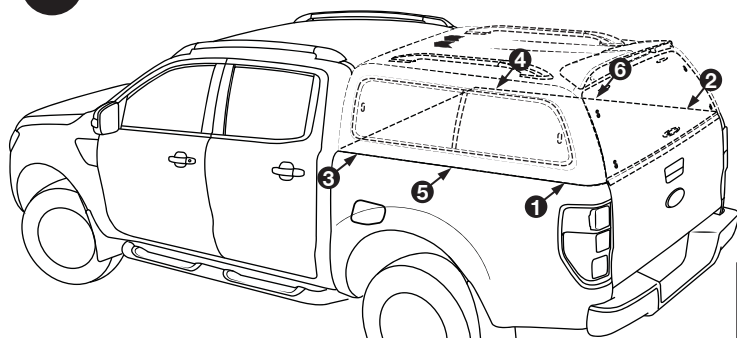


- 4C** Remove the nut's spring washer and washer from 3 loose bolts. Then, put the upper Al. clomp klamp on the Al. rail through the hole on the top of upper Al. klamp. Tighter nuts, spring washer and washer back to its original position to lock the upper Al. klamp.

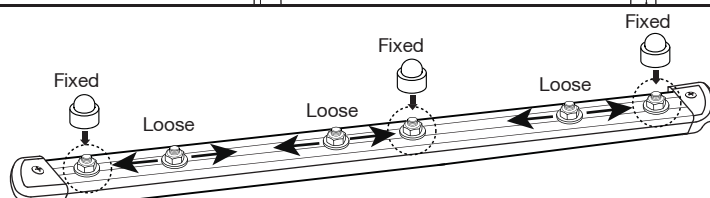


- 4A** Adjust the position to fix loose bolts on the Al. rail.
(Remarks : In case of having bed liner, Al. Klamp must be fixed at the flat area of the bed liner).

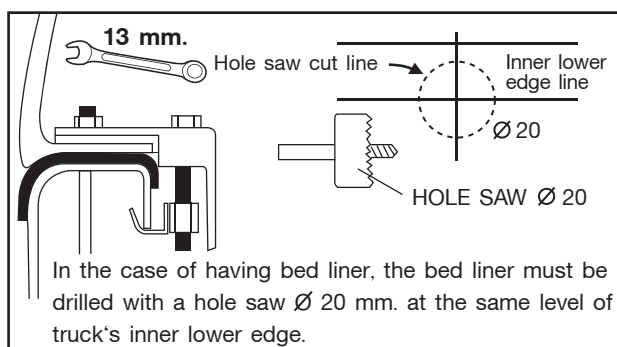


- 4B** Put the lower Al. klamp through the bolt M8x80 follow the diagram. Then, tighten the lower Al. klamp with truck's inner lower edge and bolt M8x80.

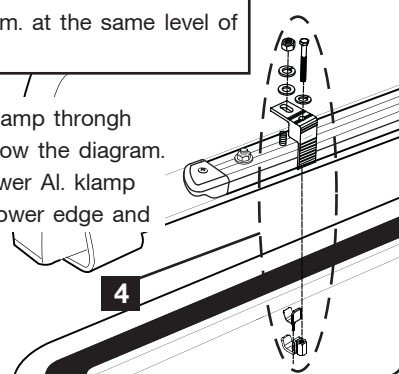


5 Installing slam lock on the rear door.

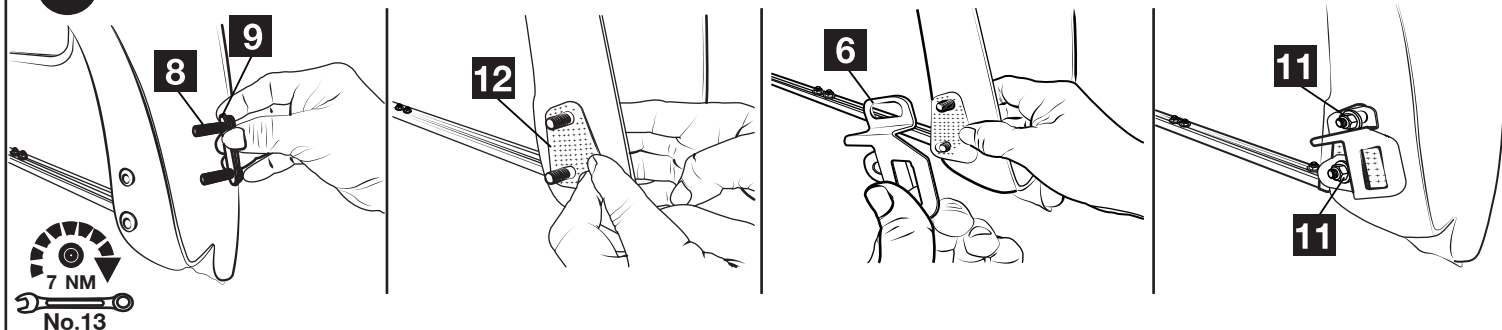


6 Adjust a latch R/L for matching with the rotary lock on the rear door.

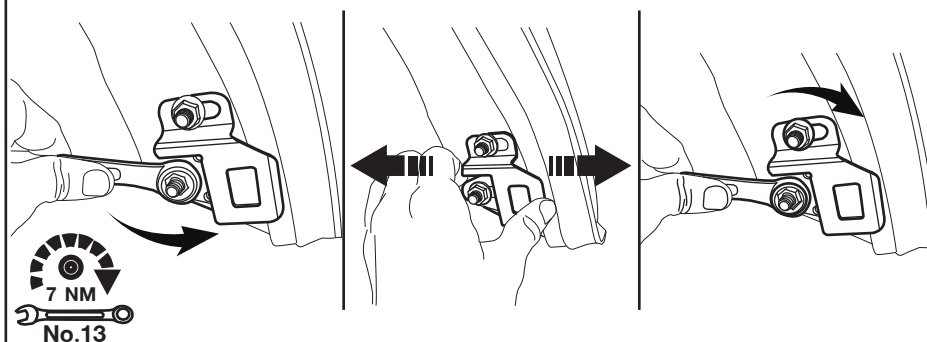


7 Shock absorber assembly.

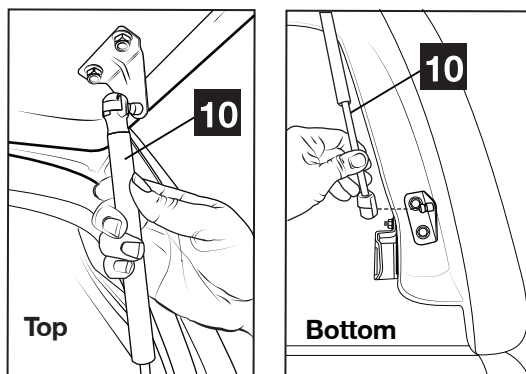


8 Final check the appearance. Glue the silicone to protect water leaking left-right.

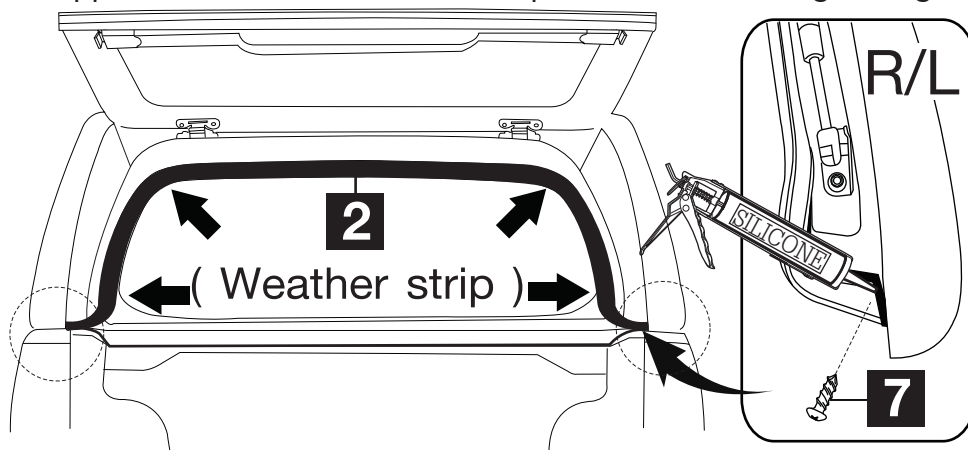

9 Stick CARRYBOY resin sticker R/L.

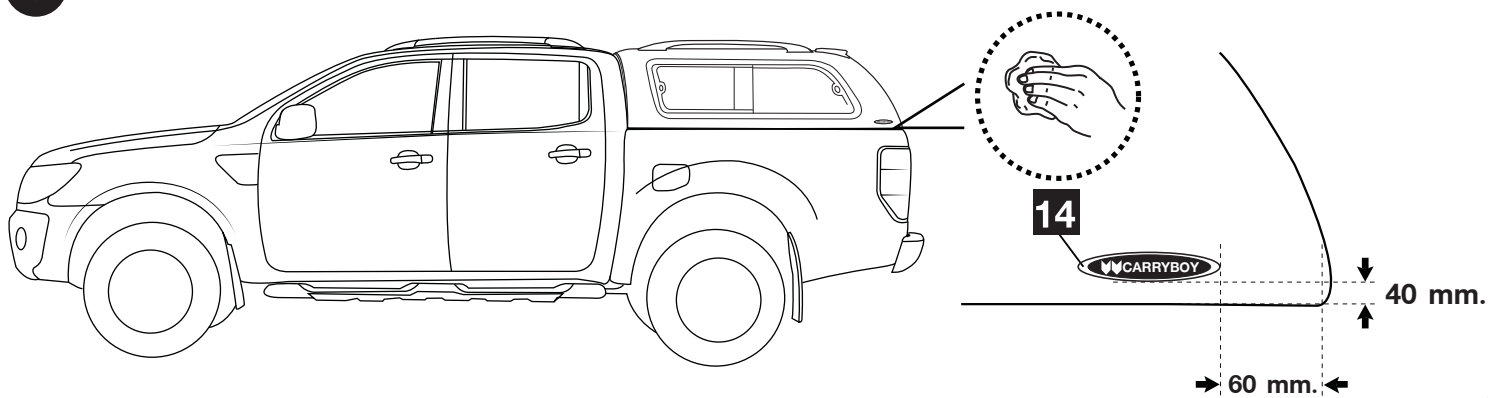


Wiring diagram (Front harness)

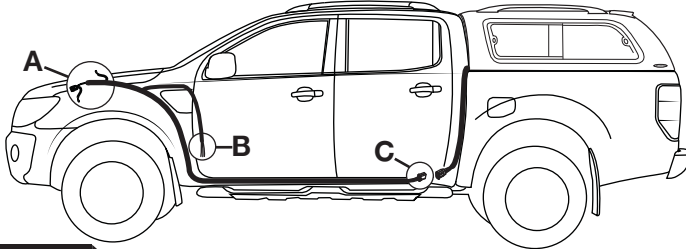


C-090440-03


- Brake
- Room Lamp
- Remote

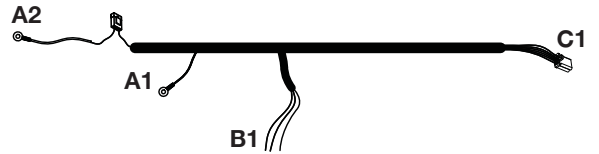


STEP A

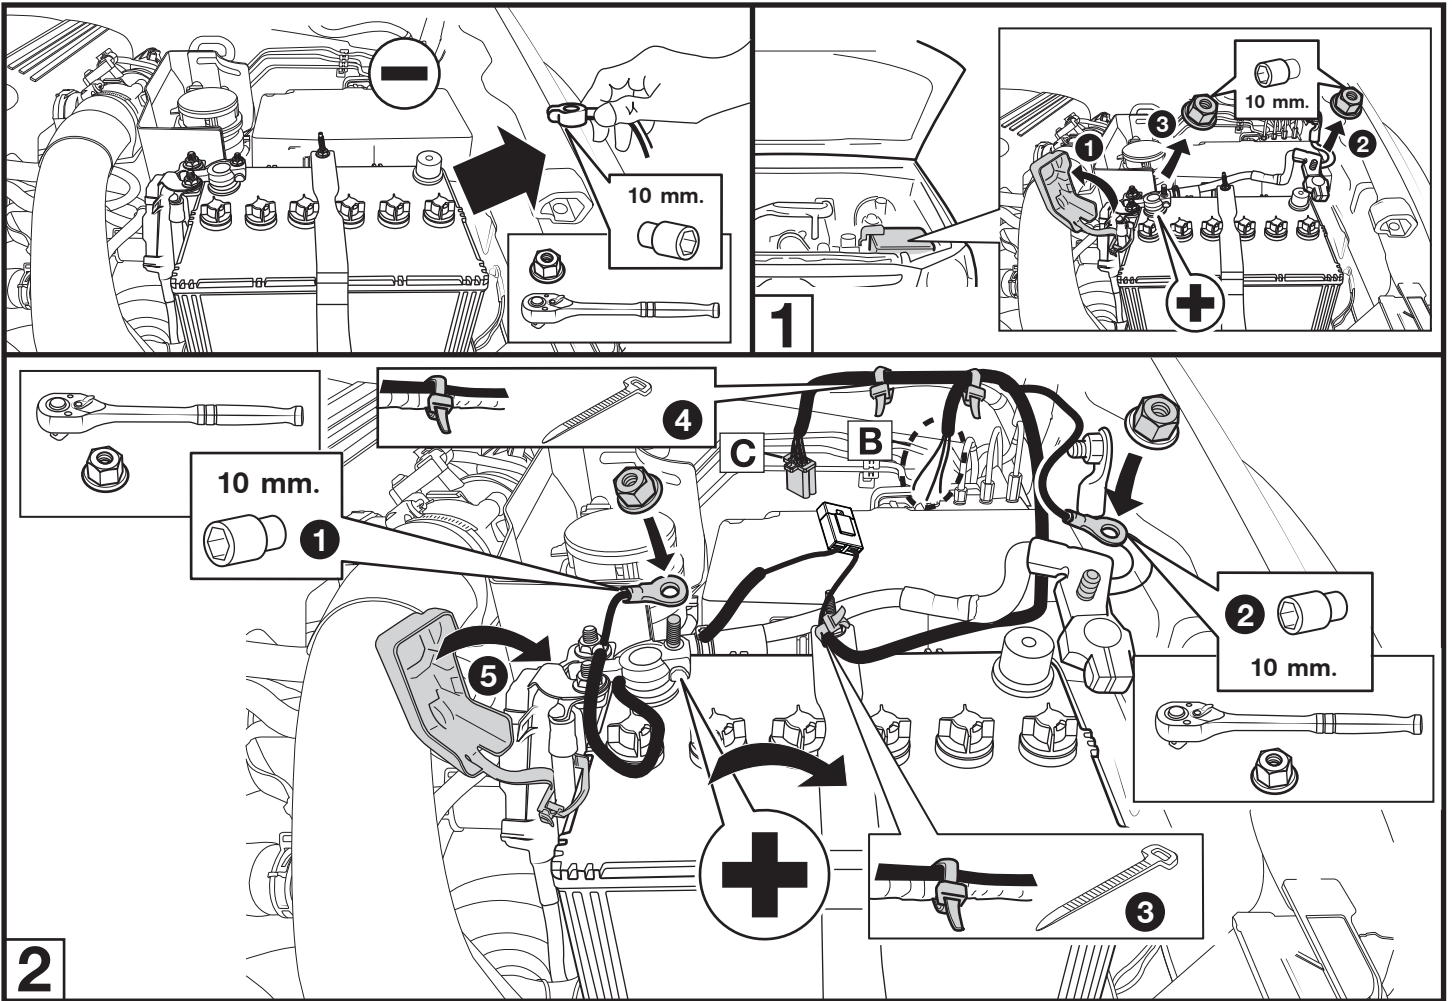


STEP B

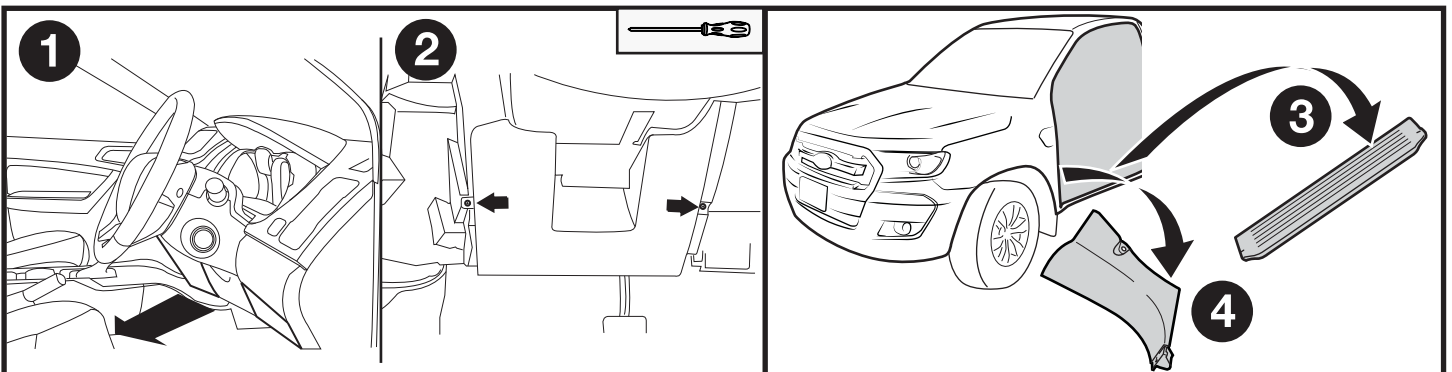


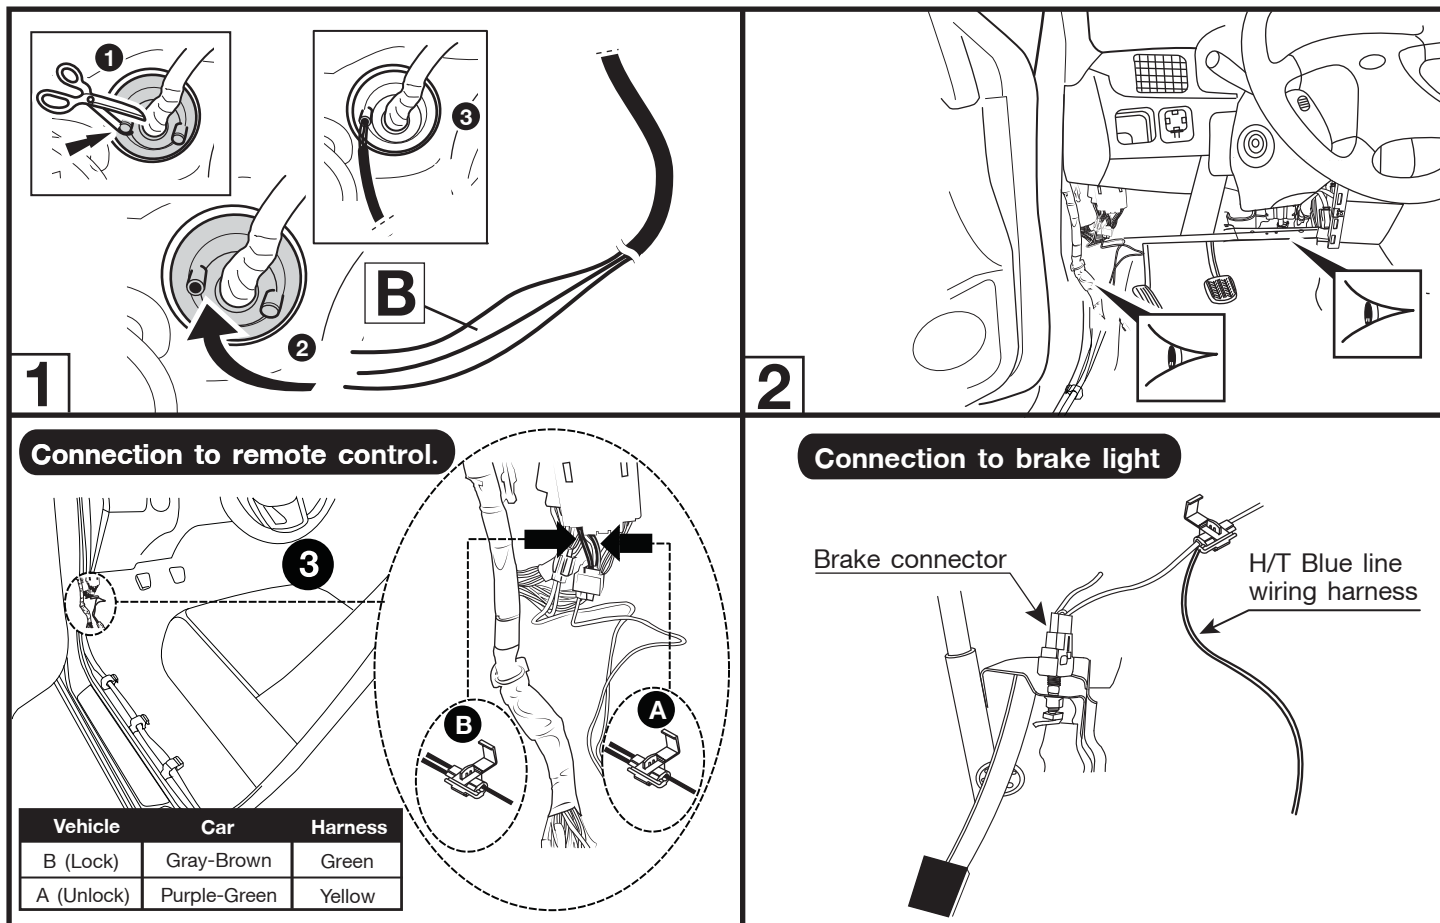

STEP C

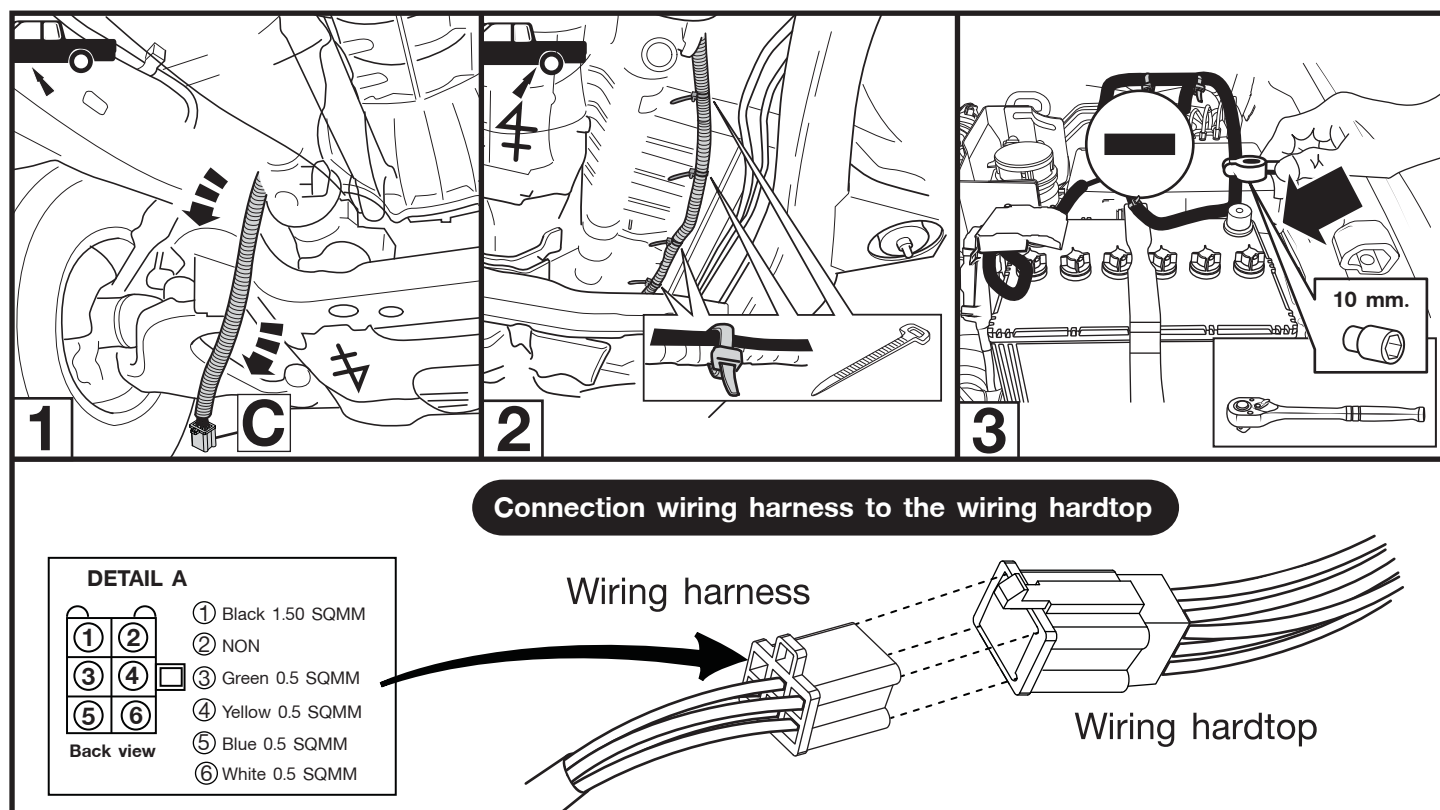


Wiring diagram (Front harness)

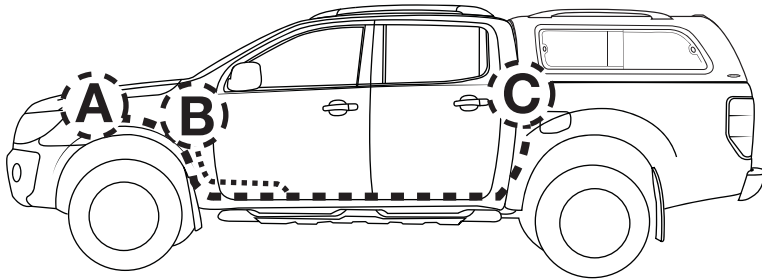


C-090437-02





- Brake
- Room Lamp
- Remote
- Defogger

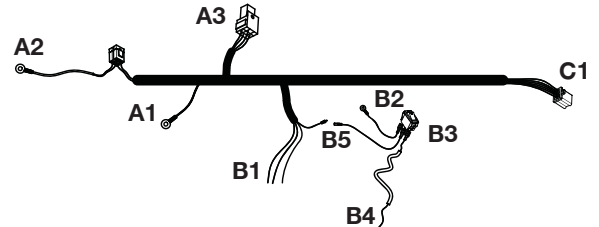

Detail A

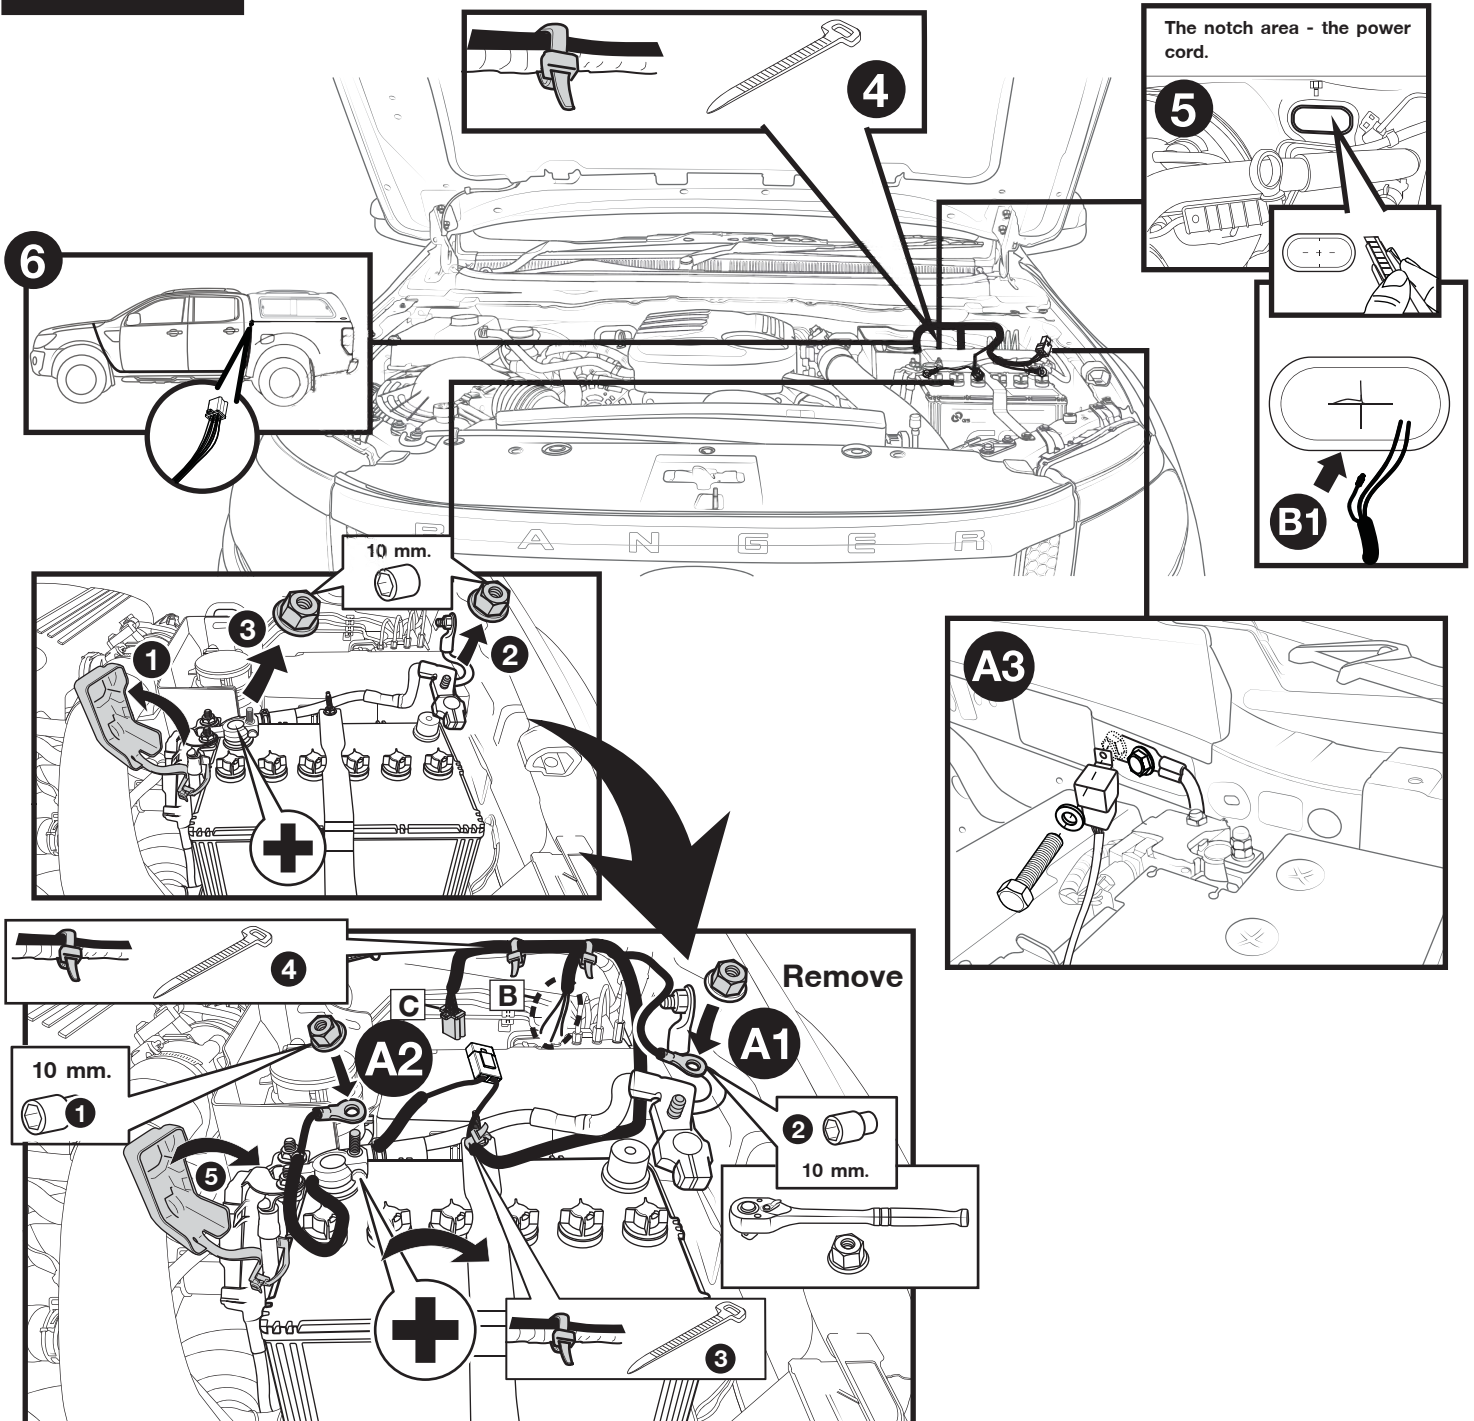


Detail B

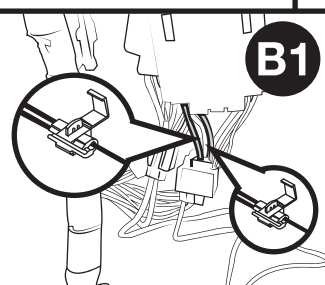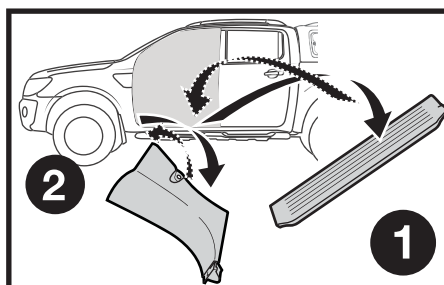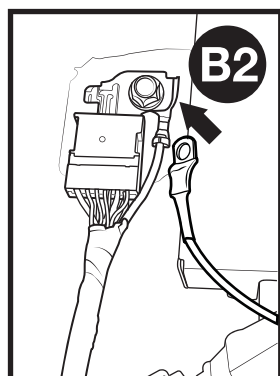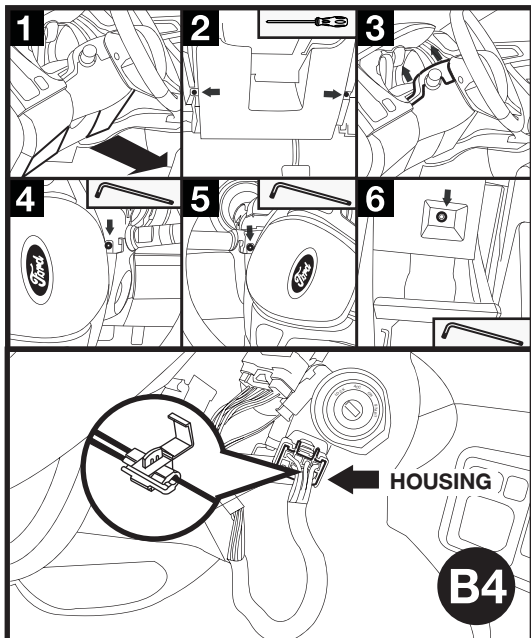




	Car	Wiring harness
Brake	Green	Blue
Room Lamp	Battery +	White
Defogger	Light blue-White	Red
Lock (Option)	Gray-Brown	Green
Unlock (Option)	Purple-Green	Yellow

Defogger Wiring Method

Remove the front console to install the defogger switch. Insert through the defogger switch from the back to the front console and plug it back properly.

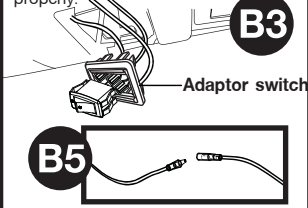


Detail C

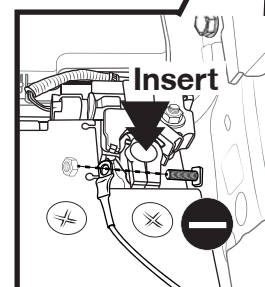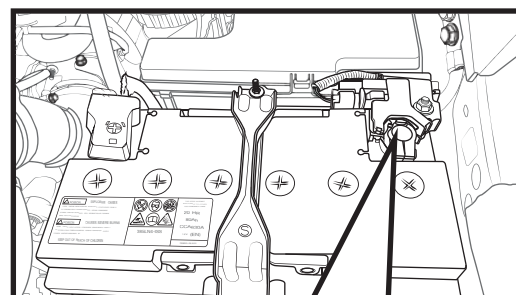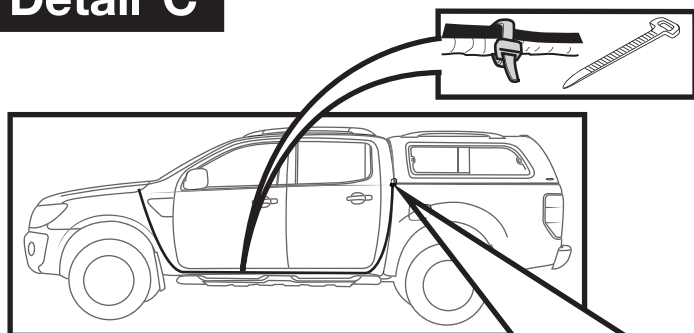


DETAIL A

①	Black	1.50	SQMM
②	Red	1.25	SQMM
③	Green	0.5	SQMM
④	Yellow	0.5	SQMM
⑤	Blue	0.5	SQMM
⑥	White	0.5	SQMM

BACK VIEW

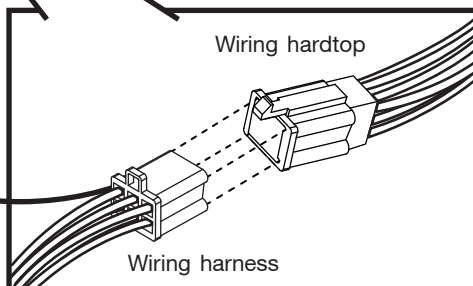


Wiring diagram (Rear harness)

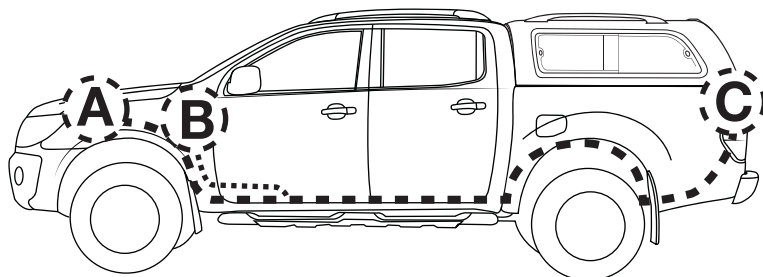

C-090437-06






- Brake
- Remote
- Room Lamp
- Defogger

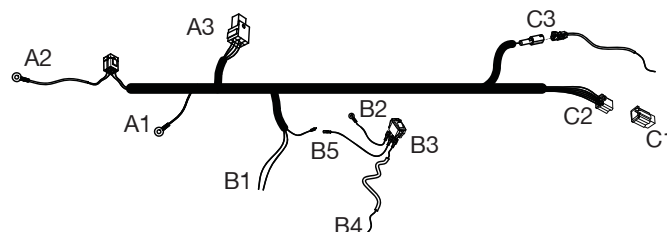





Detail A



The notch area - the power cord.

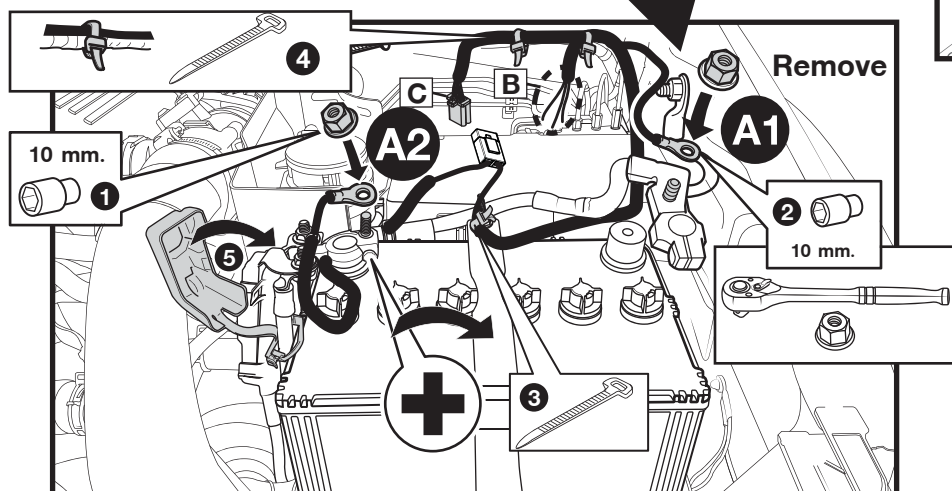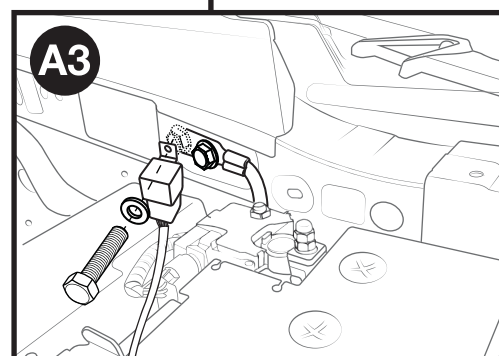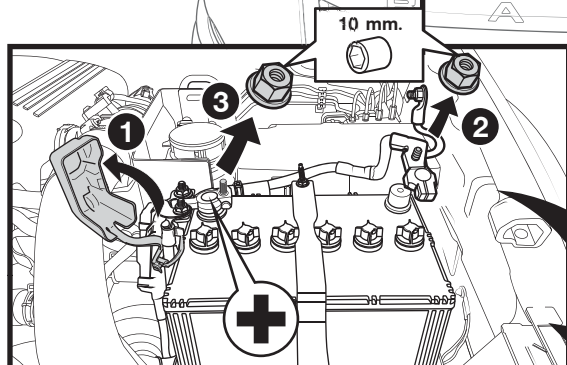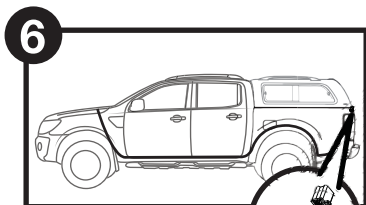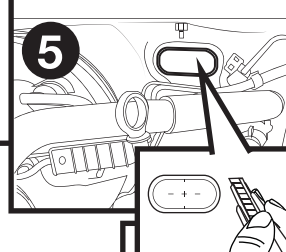

Detail B

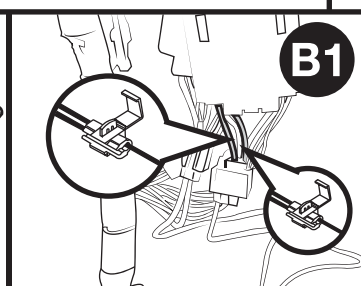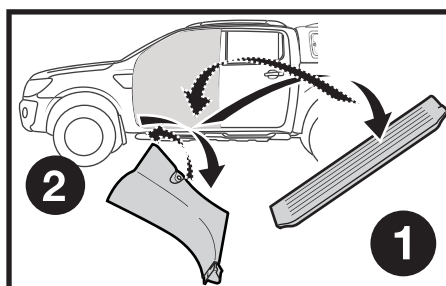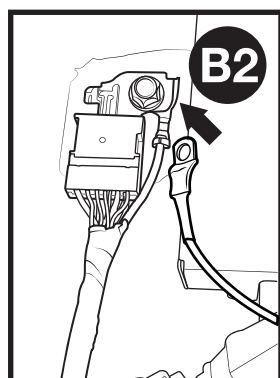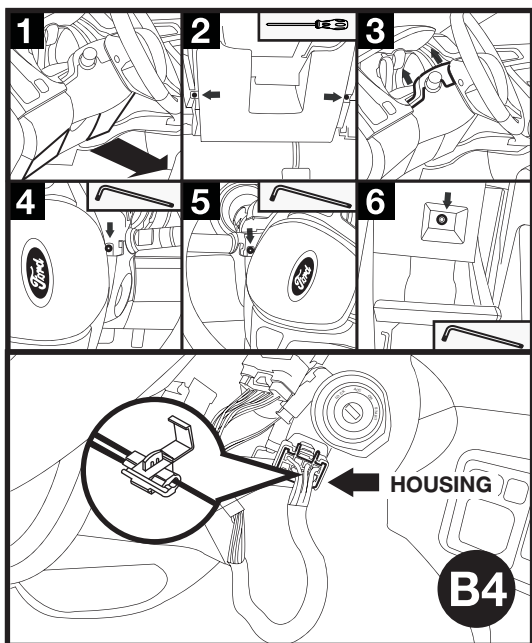

	Car	Wiring harness
Brake	Green	Blue
Room Lamp	Battery +	White
Defogger	Light blue-White	Red
Lock (Option)	Gray-Brown	Green
Unlock (Option)	Purple-Green	Yellow

Defogger Wiring Method

Remove the front console to install the defogger switch. Insert through the defogger switch from the back to the front console and plug it back properly.



Detail C

